





1066	PUSH BUTTON SWITCH	4629	POWER CORD, 10 AMP-AUSTRALIA W/ IEC CONNECTOR
1153	DOOR HINGE STRAP - ONLY		
1154	DOOR HINGE & STRAP - LEFT	4630	POWER CORD, 10 AMP ENGLISH W/ IEC
1154-2	HINGE ONLY - LEFT	4631	POWER CORD, 10 AMP-INTL.
1155	DOOR HINGE& STRAP - RIGHT	4922	SWITCH - SMALL ROCKER
1155-2	HINGE ONLY - RIGHT	4935	INSTRUCTION DECAL ENGLISH
1292	CONCAVE (KNOB) W/ SCREW	4935-E	INSTRUCTION DECAL - GERMAN
1296	ROUND MAGNETIC CATCH	4939-2	HEAT PAD COVER
1517	NAMEPLATE SERIAL NO. -100V	4941	SWITCHPLATE DECAL - ENGLISH
1605	RUBBER FOOT W/ HARDWARE	4941-E	SWITCHPLATE DECAL - GERMAN
1757	GLASS CHANNEL (SOLD PER FOOT)	5200	INDICATOR LIGHT
1788	POWER SUPPLY CORD	5307	NAMEPLATE SERIAL NO. - 120V
2168	CORD STRAIN RELIEF	5308	NAMEPLATE SERIAL NO. - 230V
2414	"POPCORN" DECAL (NOT SHOWN)	5829	#6 x 1/2" SHEET META L SCREW
2418	RED VINYL TOP W/ DECAL - GOLDRUSH	7802	10-24x 1/4 B. H. W/ NYLOCK
2419	CLEAN OUT DRAWER	7761	#6 1/4 SLTD TYPE A-N.P.
2422	INSIDE CORNER FRONT	12658	STRAIN RELIEF BRACKET
2439	PLEXIGLASS DOOR (18-1/4" x 9" x 3/16")	12658-E	STRAIN RELIEF BRACKET EXPORT
2448-A	HEAT PAD - 120V		
2448-C	HEAT PAD - 240V		
2448-F	HEAT PAD - 120V (FOR JAPAN)		
2460	DROP SHELF		
2815	GLASS CHANNEL HOLDER 11-3/16"		
2816	GLASS CHANNEL HOLDER 17-3/16"		
2823	DOOR KNOB SCREW		
3855	GLASS CHANNEL-SS - FRONT 19"		
3856	GLASS CHANNEL-SS - SIDE 13-5/8"		
4628	POWER CORD, 10 AMP-EUROPEAN W/ IEC CONNECTOR		