



We invented the popcorn machine
THEN JUST KEPT GOING!

176 MITTEL DRIVE, WOOD DALE, IL 60191

Pizza Oven and Warming Cabinet Manual

120 Volt, Single Phase, 60 Hz (-A)

230 Volt, Single Phase, 50 Hz (-E)



READ and **UNDERSTAND** these operating and safety instructions before operating this Cretors machine

I. SAFETY ALERT SYMBOL

The symbol shown is used to call your attention to instructions concerning your personal safety and the safety of others. Watch for this symbol. It points out important safety precautions. It means **ATTENTION! Become Alert! Your personal safety is involved!** Read the message that follows and be alert to the risk of personal injury or death.



II. SAFETY FIRST



The information in this manual is essential for the safe installation and operation of your Cretors machine. The manual must be read and understood before installing, and operating the equipment, or equivalent training must be provided.



The employer shall instruct each employee in the recognition and avoidance of unsafe conditions, as well as, the regulations applicable to his work environment and to control or eliminate any hazards or other exposure to illness or injury. Ref.: 29 CFR 1926.20 (b)(4)(a)(2)



It is understood that safety rules within individual companies vary. If a conflict exists between the safety procedures contained in this manual and the rules of a using company, the more stringent rule should take precedence.

III. INTRODUCTION

This manual is filled with time-saving and money-saving information regarding your Cretors machine. There is nothing more important than the safety aids and warnings that are throughout this document. The Safety Alert Symbol is used to identify topics of primary safety concern wherever they appear.

If, after reviewing this manual, anything is unclear or technical problems are encountered, contact the distributor from whom you purchased your machine for assistance. If there are any additional questions, feel free to contact our Customer Service Department at the address and/or phone number listed on the last page of this manual. Always have the model and serial number of your machine available to assist in obtaining the correct information.

V. PRODUCT IDENTIFICATION

CRETORS PIZZA OVEN AND DISPLAY CABINET

MODEL	19220-A/-E -WARMER/DISPLAY CABINET
-------	------------------------------------

Electrical:	120 Volt, 60 Cycle, 1555 Watts
	230 Volt, 50 Cycle, 1555 Watts

VI. INSTALLATION INSTRUCTIONS

1. Location

Choose a location for your Cretors Display/Warming Cabinet to maximize the ease of operation and maintenance procedures. Check your local building and fire codes for location restrictions.

2. Power Supply

Check the nameplate to determine the required power supply.



Connect your machine only to the correct power source.



Make certain the main power switch on the cabinet is in the 'OFF' position when plugging into power source.

3. Install the racks

Install the rotisserie rack and pizza trays for optimal merchandizing.

VII. OPERATING INSTRUCTIONS



Do not attempt to operate your Cretors Display Cabinet until you have read and understood this manual. Failure to do so may result in serious injury or death.



Do not attempt to operate your Cretors machine unless the installation instructions have been strictly adhered to. Failure to do so may result in serious injury or death.



Operate your display cabinet only if it is in sanitary condition (SANITATION INSTRUCTIONS). Failure to do so may result in illness to your customers.

Oven Switch

Turn Oven Switch On to start heating the oven. Set the oven temperature by pressing the set button on the digital control then press the up or down arrow to the desired temperature. The oven temperature control is located above the door on the left side of the front panel. Preheat the oven to set temperature. Once oven is at temperature, add the pizza.

Timer switch

Turn the Timer Switch On and the timer will display. To set cook time, press the set button then the up arrow to the desired time. Then press the set button again to start the timer. The timer will display "RUN" and begin counting down. Pizza cook time on a pre-heated oven is approximately 20-25 minutes.

Motor & Light Switch

Turn the Motor & Light Switch On and the cabinet lights will turn on and rotisserie shelf will start rotating. Note: The rotisserie shelf will stop when the door is opened.

Cabinet Warmer Switch

Turn the Cabinet Warmer Switch On and the cabinet temperature control will come on. Set the warmer cabinet temperature by pressing the set button on the digital control, then press the up or down arrow to the desired temperature. Then, press the set button again.

VIII. CLEANING AND SANITATION INSTRUCTIONS



Do not clean heated surfaces until they have been given sufficient time to cool. Failure to do so may result in serious burns or scalds.



Do not immerse the cabinet in water. This will damage the electrical components, and may cause short circuits, resulting in an electrical shock hazard if power is applied.

Remove and clean the pizza pans after each use.

To remove the rotisserie rack, make sure the motor connector slot that engages the rotisserie rack is facing you (runs from the front to the rear of the machine). Then, lift up and tilt the bottom of the rack towards you to remove. If the slot is facing the wrong way (runs from the left to the right of the machine), manually depress the white push button switch that is located on the upper front panel until the slot is in the correct position.



Be certain the machine is turned 'OFF' and power is unplugged before sanitizing this machine. Failure to do so could result in injury or death.

Remove and empty the clean out drawer daily. Heavy or continuous operation of the machine will require more frequent cleaning.



Failure to empty the clean out drawer daily may result in a fire hazard!

Perforated warmer bottom should be removed daily to clean and remove excess cooking debris.

The cabinet should be cleaned with any good grade glass or household cleaner suitable for stainless steel surfaces. A cleaning agent that is acceptable for food contact surfaces is recommended. Do this as required.

The glass can be cleaned with any good grade glass cleaner suitable for glass surfaces



This appliance should not be cleaned with a water jet.

This manual is filled with time-saving and money-saving information regarding your Cretors machine. There is nothing, however, more important than the safety aids and warnings found throughout this document.

If you have any questions, contact your local dealer and if there are any additional questions, feel free to contact the Customer Service Department at C. Cretors and Company.

Additional copies of this manual can be obtained from C. Cretors and Company at the address listed below. Please provide model and serial number when requesting additional copies of this manual. There will be a nominal charge for additional copies.

Cretors guarantees this machine to be free of defects in parts, materials and workmanship for one year. Please take this time to fill out the factory registration card and return it to the factory to activate your warranty. If you have any questions concerning the Cretors' warranty, please contact your local dealer or the Customer Service department at C. Cretors and Company.



We invented the popcorn machine
THEN JUST KEPT GOING!

C. CRETORS AND COMPANY

176 MITTEL DRIVE

WOOD DALE, IL 60191

PHONE (847) 616-6900, (800) 228-1885, FAX (847) 616-6970

WEB SITE: <http://www.cretors.com> Email: postmaster@cretors.com

Cretors joins the information age! Check out our links <http://www.twitter.com>

<http://www.facebook.com/pages/Chicago-IL/C-Cretors-Co/90143449620>