



We invented the popcorn machine
THEN JUST KEPT GOING!

176 MITTEL DRIVE
WOOD DALE, IL 60191

PHONE: (847) 616-6900, (800) 228-1885 FAX: 847-616-6970
WEB SITE: <http://www.cretors.com> Email: postmaster@cretors.com

SINGLE STAINLESS STEEL 70-INCH KNOCKDOWN COOLING TABLE

Assembly Instructions after 9/29/05



The following instructions are broken down into three sections. The first details the assembly of the legs and popper shelf of the unit, the second details the assembly of the blower box, third details the assembly of the bag filler on the front of the table.

I. LEGS AND SHELF

The following instructions detail the assembly of the legs and shelf on the single-shelf 70-inch knockdown table.

This assembly requires the following parts:

Number	Part	Description
1	12877	COOLING BIN WELDMENT
1	12878	COOLING BIN SCREEN, CARAMELIZER
1	12878-CH	COOLING BIN SCREEN, CARAMELIZER, CLEANOUT
4	13581	KNOCKDOWN TABLE LEG
1	1666-SS	POPPER SHELF
4	14440-LP	1/2-13 x 2 1/4 BOLT-LOW PROFILE
2	14440	1/2-13 x 2 1/4 BOLT
4	10136	1/2-13 HEX NUTS
2	14266	SS 1/2-13 CAP NUT

2	10134	1/2 FLAT WASHER
6	10135	1/2 SPLIT WASHER
4	12750	1/4-20 x 2 BOLT
4	7639	1/4-20 CAP NUT
4	5743	1/4 SPLIT WASHER
4	5742	1/4 FLAT WASHER
2	12883	CASTER, SWIVEL W/ BRAKES
2	12882	CASTER, SWIVEL W/O BRAKES

Begin by making sure all parts are available.

Ready the Receiving Tray on a Table:

To do the following work, you must place the knockdown receiving tray so that it straddles another table perpendicularly. This will allow you to attach the legs as they hang below the tray. Be sure the tray is stable, crossing the table. Use a LEG to judge height. Leave at least six inches between leg bottom and floor.

Attach the Casters to the Legs:

Insert one of the CASTERS into one of the table LEGS in the end opposite of the holes. The black sleeve should be placed into each LEG. Turn the bolt at the base of the casters to expand the black sleeve in the LEG. This will hold the CASTER in the LEG. Repeat for the other three legs.



Attach Legs to the Tray:

Begin by laying out the four LEGS with the CASTERS so that the two CASTERS with brakes are on the same side as the cut out for the bag filler. Insert the tops of the LEGS (the leg end drilled with the holes) into the four corners of the RECEIVING TRAY. Feed the four 1/4-20 x 2 1/4 BOLTS from the tray side through the legs. Place the 1/4 FLAT WASHERS on bolt, then the 1/4 SPLIT WASHERS, then the CAP NUTS. For now, just hand-tighten the four BOLTS.

Attach the Lower Screws on the Side without the Shelf:

Determine if you would like the shelf on the right side or left side of the bag filler. Install the lower bolts on the non-shelf side legs. Use two 1/2-13 x 2 1/4 BOLTS, two 1/2 SPLIT WASHERS, and two SS 1/2-13 CAP NUTS. Insert the bolts from the inside of the tray, and secure them on the outside of the leg, using the CAP NUTS and SPLIT WASHERS. Tighten.







Attach the Shelf:

1. Hold the POPPER SHELF in position on the other side of the TRAY.



2. Using two 1/2-13 x 2 1/4 BOLTS, two 1/2-13 HEX NUTS, and two 1/2 SPLIT WASHERS, attach the top bolts to hold the SHELF in position, using the topmost holes beneath the SHELF. Insert the BOLTS from the inside of the TRAY, and

- secure the BOLTS with the SPLIT WASHERS and HEX NUTS beneath the SHELF.
- Using two 1/2-13 x 2 1/4 BOLTS, two 1/2 FLAT WASHERS, two 1/2 SPLIT WASHERS, and two 1/2-13 HEX NUTS, attach the lower bolts beneath the POPPER SHELF. Insert the BOLTS as shown in following picture, from the non-SHELF side of the legs. Place the FLAT WASHERS then the SPLIT WASHERS on the bolts on the SHELF-side of the legs, then secure with HEX NUTS.
 - Tighten all nuts and bolts.

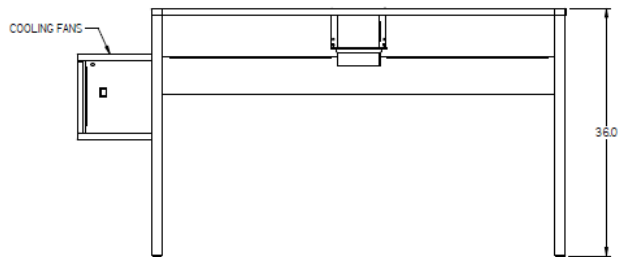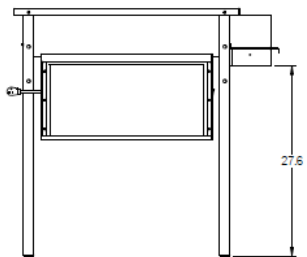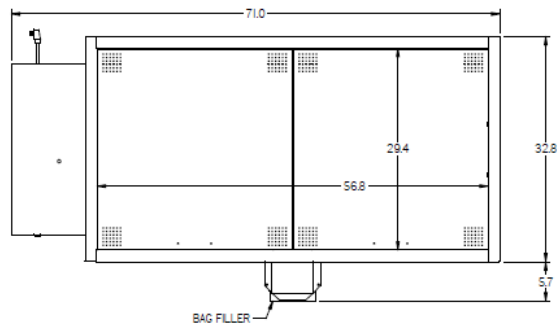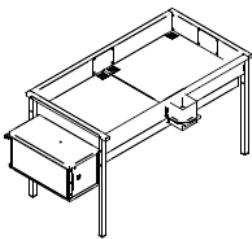

II. BLOWER BOX ASSEMBLY

The following instructions detail the assembly of the blower box to the side of the knockdown cooling table. The blower assembly is already assembled and ready to mount. Blower can be mounted to either side but should be mounted under the shelf.

Blower Box Assembly includes:

Number	Part	Description
1	13564	BLOWER BOX, CMD100
2	2831/2832	BLOWER-115V/ BLOWER-230V
1	12705	FILTER-12 x 24 x 1

This assembly requires the following parts:

Number	Part	Description
4	12749	1/4-20 x 1/2 SS CARRIAGE BOLT
4	5743	1/4 SPLIT WASHER



Position the blower box on the outside of the table with the blower mounting bolts (as shown above) so they fit inside the two cut outs on the inside of the table. Then use the four 1/4-20x1/2 bolts and lock washers inside of the bin, through the table wall into the weld nuts inside of the box.

The cooling screens can be installed once the blower box assembly has been mounted. Make sure the low profile head 1/2-13 bolts are used above the screen to make screen removal easier.

III. BAG FILLER

The instructions follow for the assembly of the bag filler on the single-shelf 70-inch knockdown table.

This assembly requires the following parts:

Number	Part	Description
1	1493-1	BAG FILLER – TOP ATTACHMENT
1	1493-2	BAG FILLER – BOTTOM ATTACHMENT
1	1493-3	BAG FILLER – SLIDE
8	7650	1/4-20 x 3/8 BOLTS
8	7639	1/4-20 CAP NUT
8	7621	1/4 STAR LOCKWASHER
2	7626	10-24 x 3/4 SCREW
2	7796	10-24 CAP NUT
2	10098	3/8 SS SPACER
2	2554	FASTENER-LUDWIG
2	7790	#10 STAR LOCKWASHER

Begin by making sure all parts are available.

Assemble the Bag Filler:

1. Place the BAG FILLER – TOP upon the BAG FILLER – BOTTOM, so that the holes line up and the lips line up toward the front. Place the BAG FILLER – SLIDE into place as you do this. Secure the assembly with four 1/4-20 x 3/8 BOLTS, four 1/4 STAR LOCKWASHERS, and four 1/4-20 CAP NUTS. Be sure to feed the BOLTS through from the top, and place the LOCKWASHERS on the bottom side, near the CAP NUTS. Tighten.
2. Turning the bag filler on its side to expose the bottom, install the bag clips on either side below. Use two 10-24 x 3/4 SCREWS, two 3/8 SS SPACERS, two FASTENERS, two #10 STAR LOCKWASHERS, and two 10-24 CAP NUTS. Be sure to position the FASTENERS on the outside, with 3/8 SS SPACERS between SCREW and FASTENER. Be sure the Ludwig name is on the outside and right-side up. There will be tension between the clip and the bag filler wall. On the inside, place a #10 LOCKWASHER, and secure clips with 10-24 CAP NUTS. Tighten well.
3. Screw the bag filler to the table. Use four 1/4-20 x 3/8 BOLTS, four 1/4 STAR LOCKWASHERS, and four 1/4-20 CAP NUTS. Be sure to feed the bolts through from the outside to the inside of the table, and place the LOCKWASHERS on the inside wall of the table. Tighten.

*Cretors offers a custom made 12" Discharge Chute, Part # 19136, that can be installed instead of the bag filler. This custom option would require on site modification to the table.



CRETORS AND COMPANY

TWIN STAINLESS STEEL

70-INCH KNOCKDOWN COOLING TABLE

Assembly Instruction Modifications

The twin-shelf knockdown table is constructed in the same fashion as the single-shelf model, with the following modifications:

I. LEGS AND SHELF


Instead of installing the lower bolts on the non-shelf side of the tray, install the additional shelf. The following additional hardware will be included:

Number	Part	Description
1	1666-SS	POPPER SHELF
2	14440	1/2-13 x 2 1/4 BOLT
4	10136	1/2-13 HEX NUT
2	7781	1/2 FLAT WASHER
2	10135	1/2 SPLIT WASHER

The following hardware will NOT be included:

Number	Part	Description
2	14266	SS 1/2-13 CAP NUTS

Install the second shelf as you did the first on the opposite side of the table.

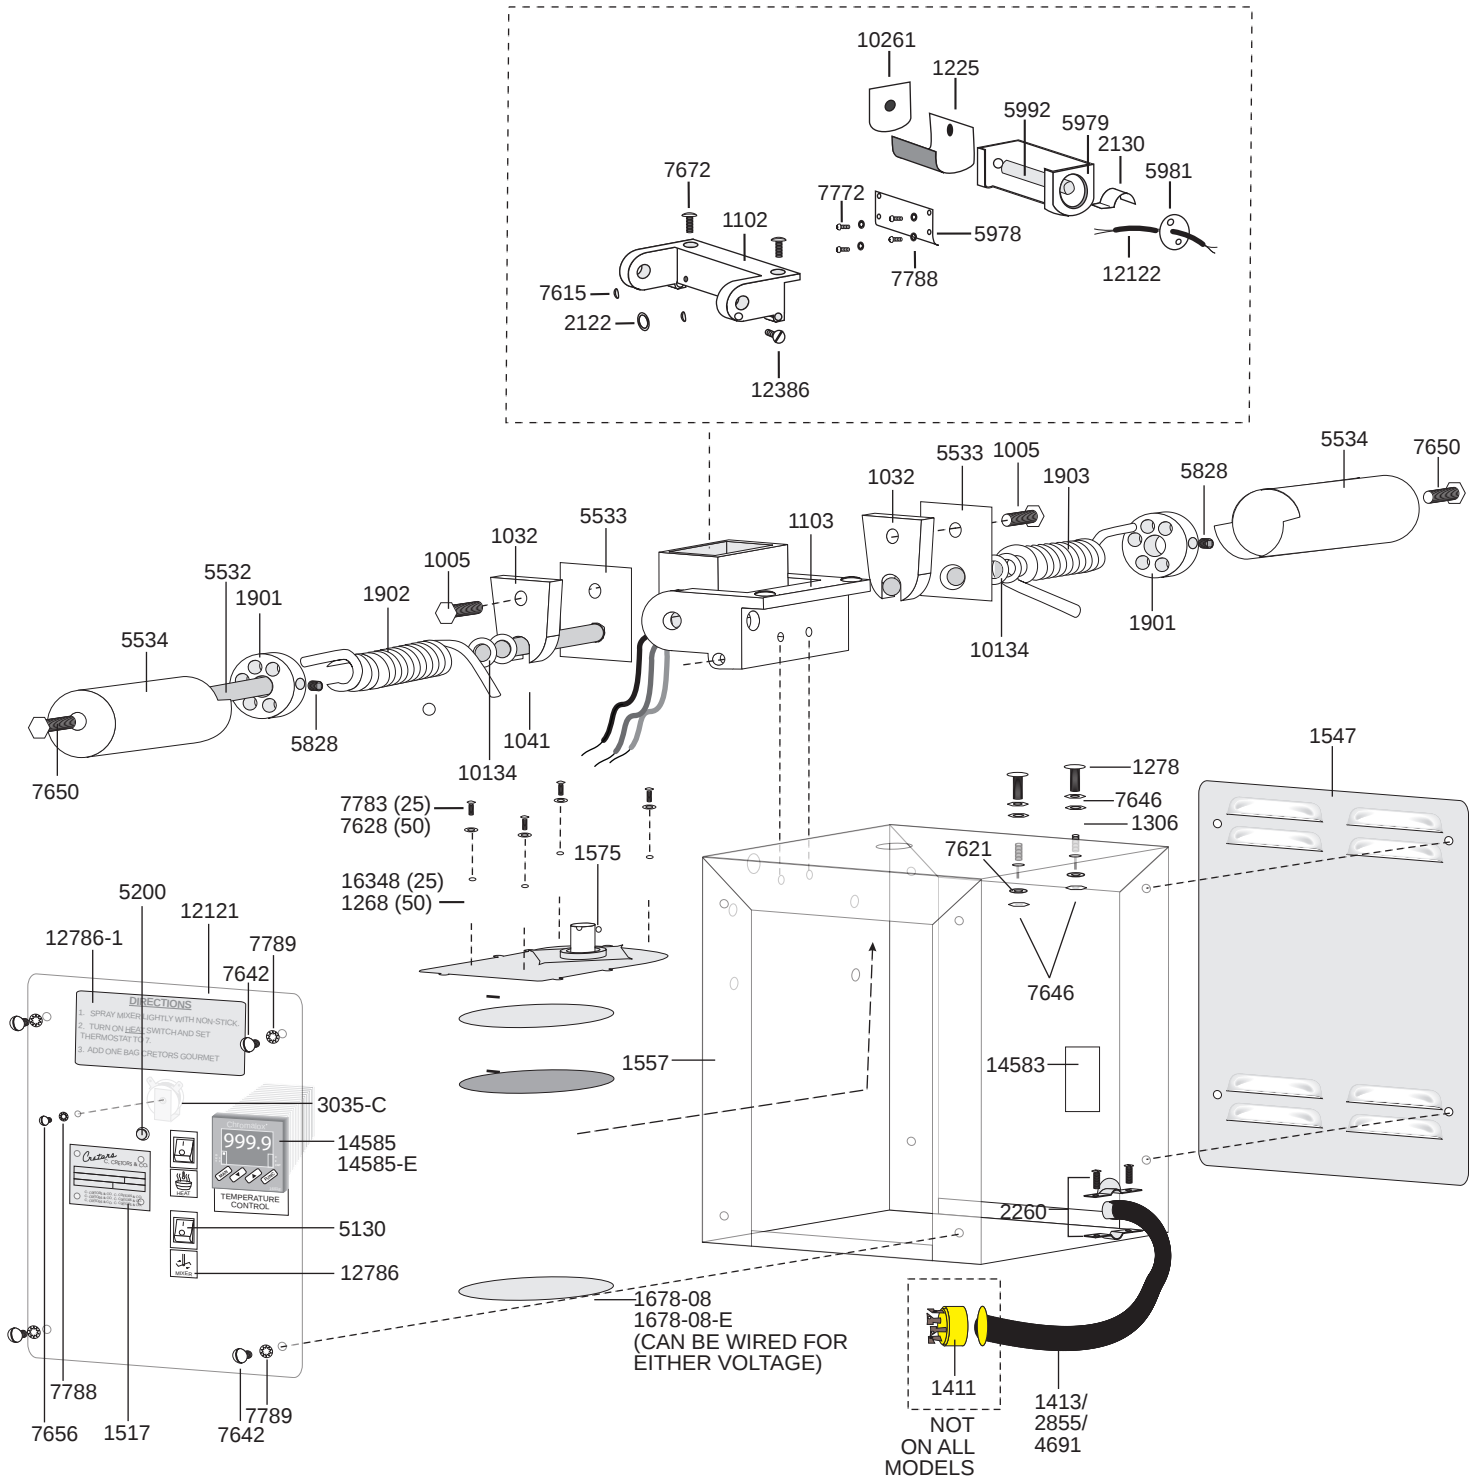

CARAMALIZER - BASE PARTS CMD25/50

BEGINNING SERIAL number 0308

DOC: CM300004

CM-3.0-B

03/2008

1005	OILITE BEARING	7615	1/4-20 X 3/4 HEX CAP SCREW
1032	CROSS SHAFT LUG	7619	1/4-20 x 1/2 HEX SCREW
1041	PAN DUMP SPRING ROD	7621	1/4" INTERNAL TOOTH LOCKWASHER
1102	KETTLE SUPPORT BRACKET	7622	3/8" FLAT WASHER
1103	TERMINAL HOUSING COVER	7628	1/4-28 X 3/4" HEX HEAD (cmd50)
1225	FISH PAPER	7635	3/8" MED. SPLIT LOCKWASHER
1268	1/4 x 1/4 SPACER (cmd50)	7638	3/8-16 X 1' HEX BOLT
1278	KETTLE LEVEL ADJUSTING SCREW	7642	8-32 x 3/8 S.S. TRUSS HEAD
1306	HEX PAN REST STUD	7646	1/4-28 HEX NUT
1411	PLUG-30 AMP, 125/250V, T,4-WIRE	7650	1/4-20 X 3/8 HEX HEAD
1413	RECEPTACLE-30A 4-WIRE, NEMA	7656	6-32 X 3/8 BINDING HEAD
1547	BACK PANEL - CARMELIZER	7669	3/8-16 HEX NUT
1557	ROLL PIN	7672	10-32 x 1/4 SET SCREW
1569	3/8-16 x 1-1/2 HEX BOLT	7772	6-32 x1/4 BINDING HEAD
1575	1/4 x 1-3/8 ROLL PIN	7780	5/16" FLAT WASHER
1678-08	MOTOR (DOMESTIC&EXPORT)	7783	1/4-28 X 1-1/2" HEX HEAD (cmd25)
1901	SPRING COLLAR	7788	#6 LOCKWASHER
1902	DUMP SPRING - 13 COIL	7789	#8 STAR LOCKWASHER
1903	DUMP SPRING - 10 COIL	10134	1/2" FLAT WASHER
2122	HEYCO BUSHING	10261	FISHPAPER WASHER DIRECT WIRE
2130	PIPE CLAMP	12121	SWITCHPLATE - DIGITAL
2260	1/2" CONNECTOR	12122	WIRE HARNESS
2855	CORD-25 AMP-Export 230V	12386	10-24 x 1" FLAT HEAD SCREW
3035-C	BUZZER - 240 VOLT	12786-1	DECAL - INSTRUCTIONS
4691	CORD - 25AMP, 5X4.0MM-Export 400V ØN	14583	RELAY - 230V. SINGLE POLE
5130	LIGHTED SWITCH	14585	DIGITAL TEMPERATURE 120V.
5200	INDICATOR LIGHT	14585-E	DIGITAL TEMPERATURE CONTROL 230V.
5532	CROSS SHAFT	16348	1/4 x 3/8 x 7/8 STEEL SPACER (cmd25)
5533	CROSS SHAFT LUG		
5534	SPRING COVER		
5828	5/16-24 x 1/2 HALF DOG PT. SET SC		
5978	TERMINAL COVER PLATE		
5979	TERMINAL HOUSING		
5981	BAKELITE WASHER		
5992	INSULATOR TUBE		
7604	CROSS SHAFT		

C. CRETORS AND COMPANY

176 MITTEL DRIVE

WOOD DALE, IL 60191

PHONE: (773)588-1690, (800)228-1885, FAX: (847) 616-6970

WEB SITE: <http://www.cretors.com> Email: postmaster@cretors.com

DIGITAL CARAMALIZER - KETTLE PARTS


UPSIDE DOWN

BEGINNING SERIAL No. 02066870

DOC: CMD20011

CMD-2.1-A

9/2007

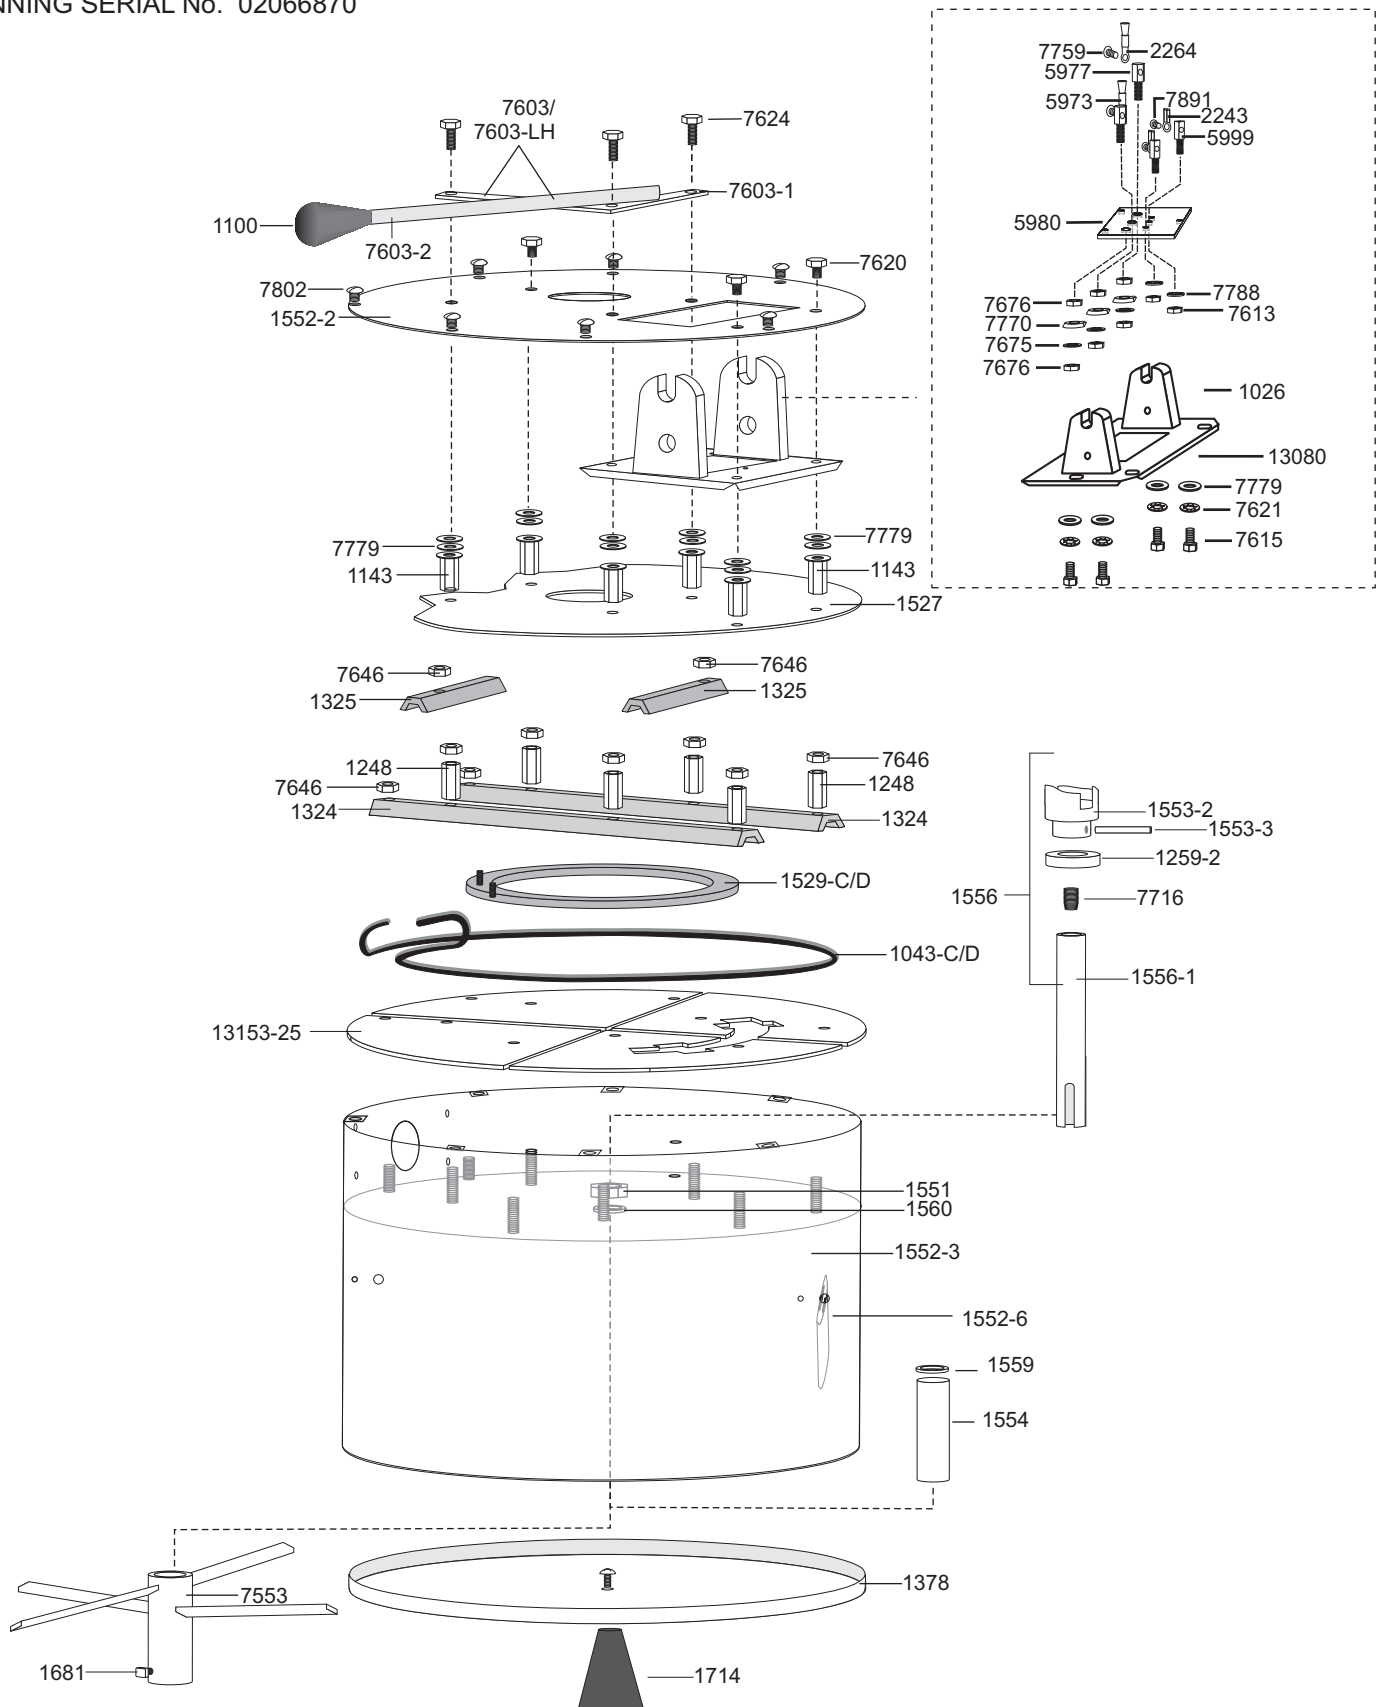

C. CRETORS AND COMPANY

176 MITTEL DRIVE

WOOD DALE, IL 60191

PHONE: (773)588-1690, (800)228-1885, FAX: (847) 616-6970

WEB SITE: <http://www.cretors.com> Email: postmaster@cretors.com

DIGITAL CARAMALIZER - KETTLE PARTS

DOC: CMD20011

CMD-2.1-A

UPSIDE DOWN

9/2007

BEGINNING SERIAL No. 02066870

1026	PAN LUG	7603-2	DUMP HANDLE BAR ONLY
1043-C	ELEMENT 2000 WATT 240 V	7603-LH	DUMP HANDLE LEFT HAND
1043-D	ELEMENT 2000 WATT 208 V	7676	10-32 MONEL NUT
1100	KNOB	7770	#10 CUP WASHER
1143	SPACER - HEX W/WASHER	7779	1/4" FLAT WASHER
1248	SPACER	7789	#8 INTERNAL TOOTHLOCK WASHER
1259-2	SHAFT COLLAR W/ SET SCREW	7802	10-24 x 1/4 BINDING HEAD
1268	1/4" SPACER	7891	8-32x3/16 SS PAN HEAD SCREW
1324	ELEMENT CLAMP	12357	THERMOCOUPLE ASSY-CMD25
1325	ELEMENT CLAMP (3-1/4")	13080	PAN LEG PLATE CMD25
1378	MIXER PAN COVER	13153-25	DIFFUSER PLATE CMD25
1527	BAFFLE PLATE	13246	HEAT DIST. PLATE
1529-C	ELEMENT 500 WATT, 240 VOLT		
1529-D	ELEMENT 500 WATT, 208 VOLT		
1529-D	500 WATT, 208 VOLT ELEMENT		
1551	CENTER STUD NUT		
1552-3	CARMELIZER KETTLE-CMD25		
1552-2	PAN BOTTOM COVER		
1552-6	DEFLECTOR-CMD25		
1553-2	CLUTCH DOG ONLY		
1553-3	CLUTCH DOG PIN		
1554	CENTER STUD		
1556	S.S. CLUTCH DOG & SHAFT		
1556-1	S.S. CLUTCH DOG SHAFT ONLY		
1558	PAN MIXER LUG		
1559	CENTER STUD WASHER		
1560	LOCK WASHER		
1681	MIXER BLADE ASSY - DRIVE BOLT		
1714	KNOB		
5977	WIRE TERMINAL STUD		
5980	MYROY PLATE		
5999	THERMOCOUPLE STUD		
7553	SS MIXER BLADE ASSY		
7589D-C	KETTLE ASSY 240V COMPLETE-DIG		
7589D-D	KETTLE ASSY 208V COMPLETE-DIG		
7603	DUMP HANDLE ASSY		
7603-1	DUMP HANDLE BRACKET ONLY		

C. CRETORS AND COMPANY

176 MITTEL DRIVE

WOOD DALE, IL 60191

PHONE: (773)588-1690, (800)228-1885, FAX: (847) 616-6970

WEB SITE: <http://www.cretors.com> Email: postmaster@cretors.com

EG(PR) 32/48/60 ONE PIECE KETTLE BREAKDOWN

120/208; 120/240; 230V; 400V

UPSIDE-DOWN VIEW

BEG. SERIAL NUMBER: 10050604

DOC: G2000049

G32/48/60-C/D/E/G-2.1-A


05/2010

FOR CE MARKED
MACHINES, 3918
WAS REPLACED
WITH 14593 AND
14942 ON
400v MACHINES
BEGINNING 07/08.




14942 (LOCATED
IN CABINET)

16394
(400v kettles
use 1 16394
and 1 16395
not shown)

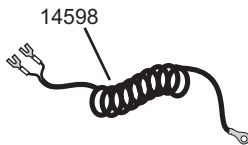

12267-DIG/
12267-LH-DIG/
12267-DIG-SS/
12267-LH-SS-DIG

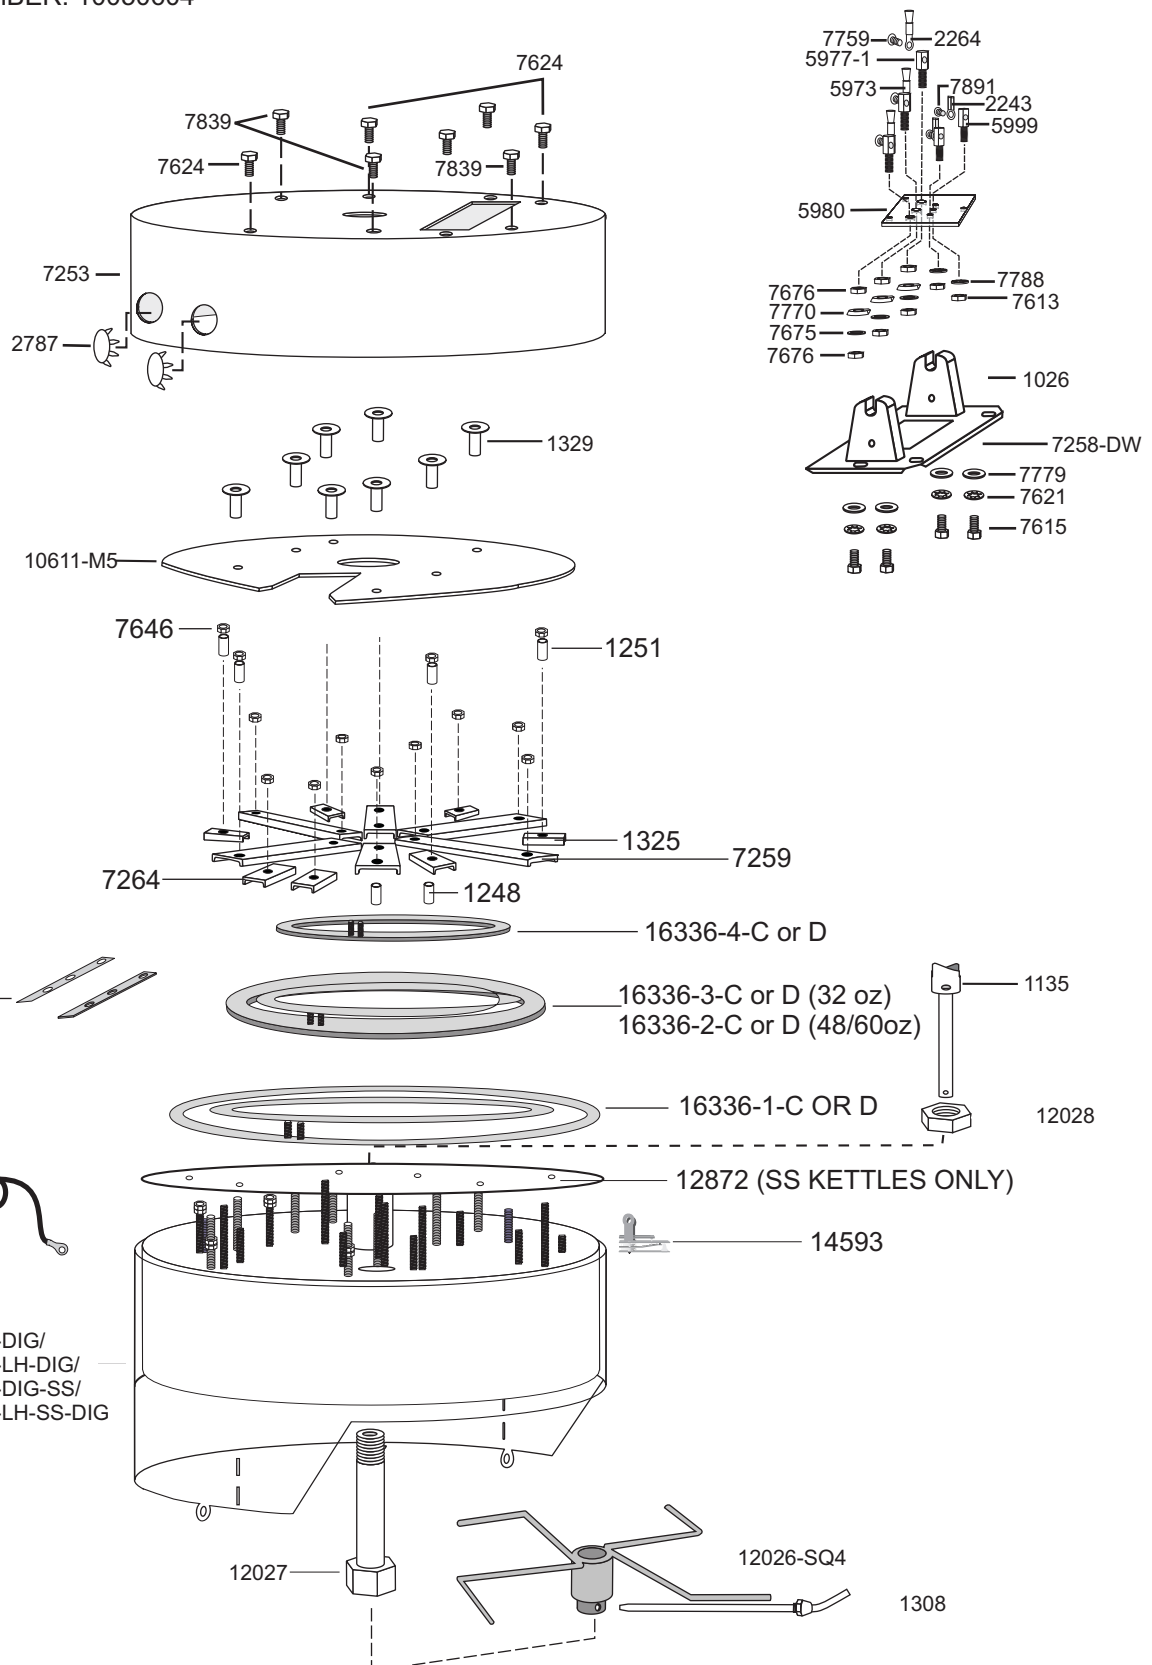

C. CRETORS AND COMPANY
3243 N. CALIFORNIA AVENUE
CHICAGO, IL 60618

PHONE: (773)588-1690, (800)228-1885, FAX: (773)588-2171

WEB SITE: <http://www.cretors.com> Email: postmaster@cretors.com

EG(PR) 32/48/60 ONE PIECE KETTLE BREAKDOWN

DOC: G2000049

G32/48/60-C/D/E/G-2.1-A

120/208; 120/240; 230V; 400V

05/2010

UPSIDE-DOWN VIEW

BEG. SERIAL NUMBER: 10050604

1026	PAN LUG	12028	CENTER STUD LOCKNUT
1135	CLUTCH DOG AND SHAFT	12267-DIG	POPPER PAN-ONE PC. DROP-48 OZ -DIG
1251	5/8" SPACER	12267-LH-DIG	POPPER PAN 48 OZ.-LEFT HAND - DIG
1308	ANTI-PAK PIN	12267-SS-DIG	POPPER PAN - SS ONE PC. DROP- 48 OZ DIGITAL
1325	ELEMENT CLAMP 3-1/4"	12267-LH-SS-DIG	POPPER PAN - SS - 48oz - LEFT HAND DIGITAL
1329	RETAINER HEX SPACER	12872	DIFFUSER PLATE
2243	TERMINAL-WIRE	14593	HIGH LIMIT
2264	HIGH TEMP. TERMINAL	14598	THERMOCOUPLE-GIANT
2787	HOLE PLUG 1/2"	14942	HIGH LIMIT-LATCHING RELAY
5973	HEAT SHRINK	16336-1-C	ELEMENT 2000 WATT, 240 VOLT
5977-1	WIRE TERMINAL STUD	16336-1-D	ELEMENT 2000 WATT, 208 VOLT
5980	MYROY PLATE	16336-2-C	ELEMENT 3050 WATT, 240 VOLT (48/60 OZ)
5999	THERMOCOUPLE STUD	16336-2-D	ELEMENT 3050 WATT, 208 VOLT (48/60 OZ)
7253	RETAINER	16336-3-C	ELEMENT 1500 WATT, 240 VOLT(32OZ)
7258-DW	PAN LEG PLATE-G48/60E-DIRCT WIRE	16336-3-D	ELEMENT 1500 WATT, 208 VOLT(32OZ)
7259	ELEMENT CLAMP 5-1/4"	16336-4-C	ELEMENT 750 WATT, 240 VOLT
10611-M5	BAFFLE PLATE	16336-4-D	ELEMENT 750 WATT, 208 VOLT
7264	ELEMENT CLAMP 1-5/8"	16394	NICKEL STRAP-4.5"
7605	KETTLE WIRE SET	16395	KETTLE ELEMENT JUMPER - 400V
7613	6-32 X 5/16 X 7/64 HEX NUT	16400	ELEMENT SPACER
7615	1/4-20 X 3/4 HEX CAP SCREW		
7621	1/4" INTERNAL TOOTH LOCKWASHER		
7624	1/4-28 x 1/2 HEX CAP		
7646	1/4-28 HEX NUT		
7675	# 10 FLAT MONEL WASHER		
7676	10-32 MONEL NUT		
7759	10-32 SCREW		
7779	1/4" SAE FLAT WASHER		
7788	#6 STAR LOCKWASHER		
7797	4-36 x 1/8 SLOTTED BINDER HEAD		
7839	1/4-28 x 5/8 HEX HEAD		
7891	8-32 X 3/16 SS PAN HEAD SCREW		
10313	KETTLE WIRE SET (400V ONLY)		
10611-M5	BAFFLE PLATE		
12026-SQ4	STIRRER BLADE - 4 BLADE SQUARE		
12027	PAN CENTER 1 PC		

C. CRETORS AND COMPANY
3243 N. CALIFORNIA AVENUE
CHICAGO, IL 60618

PHONE: (773)588-1690, (800)228-1885, FAX: (773)588-2171

WEB SITE: <http://www.cretors.com> Email: postmaster@cretors.com

PR32,EG32,PR48,EG48,PR60,EG60
ONEPIECEKETTLE&PEDESTAL PARTS
120/208V,120/240V/60Hz
ONE POP & SALT/SUGAR OPTION
 BEGINNING SERIAL: 1810000



DOC: G2000050

G1P32/48/60-C/D-2.0-B
 10/2018



KETTLE ASSEMBLIES

(All have -DIG suffix)




7251ZP-C-DIG
 7251ZP-D
 7251ZP-C-LH.
 7251ZP-D-LH
 7251ZP-C-SS
 7251ZP-D-SS
 7251ZP-C-LH-SS.
 7251ZP-D-LH-SS
 7594ZP-C
 7594DWIP-D
 7594ZP-C-LH.
 7594ZP-D-LH
 7594ZP-C-SS
 7594ZP-D-SS
 7594ZP-C-LH-SS.
 7594ZP-D-LH-SS

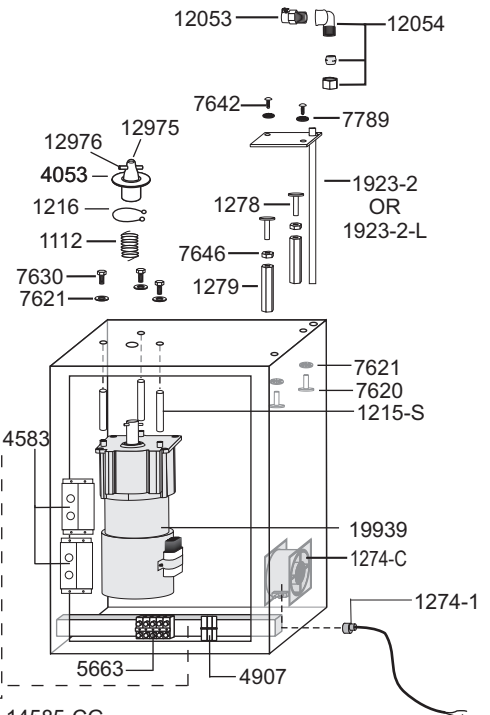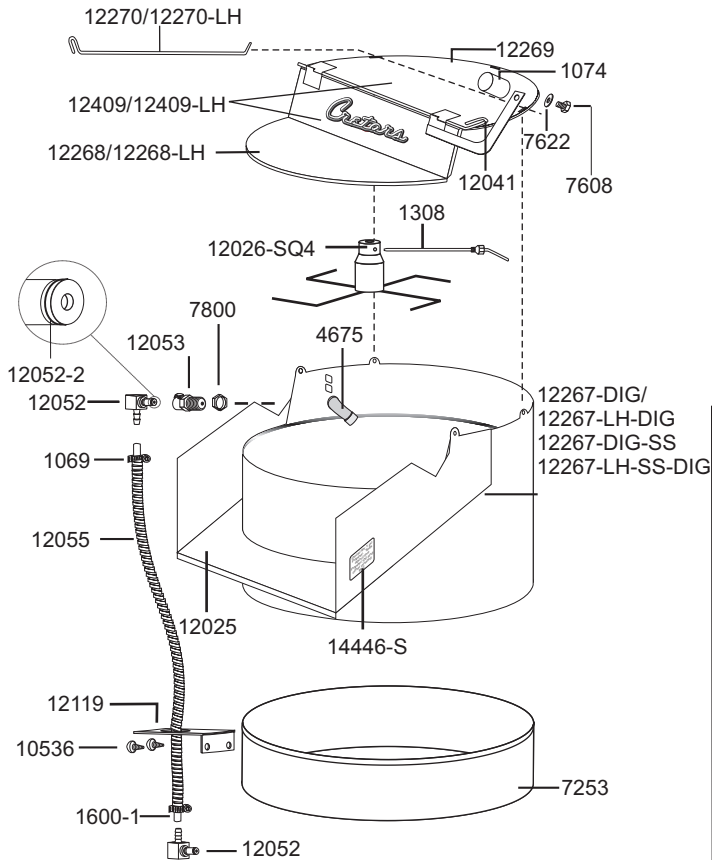

**ONE POP SALT/SUGAR
 OPTION**

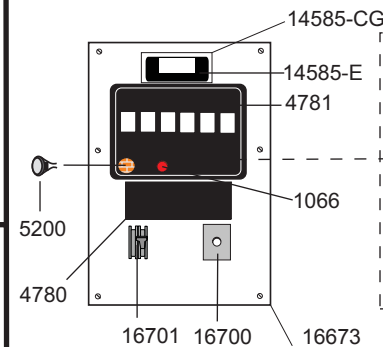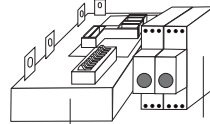

ONE POP SALT/SUGAR OPTION

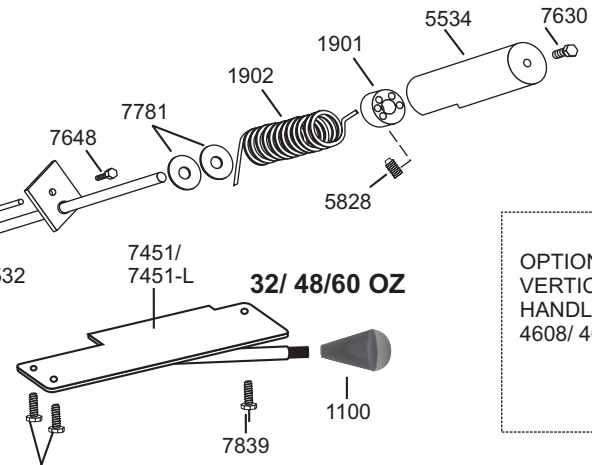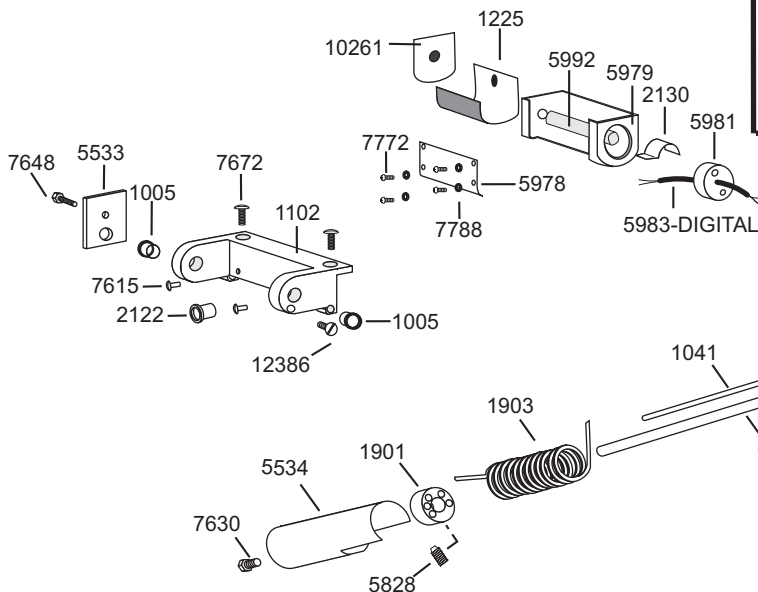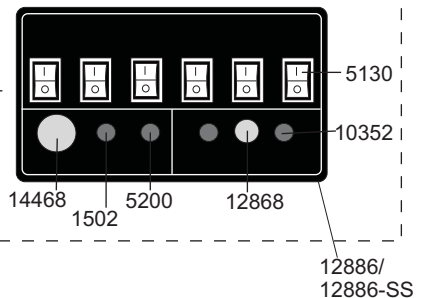

OPTIONAL
 VERTICAL DUMP
 HANDLE
 4608/ 4608-L

C. CRETORS AND COMPANY
 3243 N. CALIFORNIA AVENUE
 CHICAGO, IL 60618

PHONE: (773)588-1690, (800)228-1885, FAX: (773)588-2171

WEB SITE: <http://www.cretors.com> Email: postmaster@cretors.com

PR32, EG32, PR48, EG48, PR60, EG60
ONE PIECE KETTLE & PEDESTAL PARTS
120/208V, 120/240V/60Hz
ONE POP & SALT/SUGAR OPTION
BEGINNING SERIAL: 10050000

DOC: G2000050 G1P32/48/60-C/D-2.0-B
05/2010

1005	OILITE BEARING	7451-L	DUMP HANDLE - G32/48/60E LEFT HAND
1026	PAN LUG	7608	3/8-24 x 3/8 HEX HEAD
1041	PAN DUMP SPRING ROD	7615	1/4-20 X 3/4 HEX CAP SCREW
1066	SWITCH - PUSH BUTTON	7620	1/4-28 x 3/8 HEX HEAD
1069	CLAMP HOSE	7621	1/4" INTERNAL TOOTH LOCKWASHER
1074	COUNTERWEIGHT	7622	3/8 WASHER
1100	DUMP HANDLE KNOB	7624	1/4-28 x 1/2 HEX CAP
1102	KETTLE SUPPORT BRACKET	7630	1/4-20 x 1/2 HEX BOLT
1112	STIRRER SHAFT SPRING	7642	8-32 x 3/8 SS TRUSS HEAD
1140	PAN CENTER	7646	1/4-28 HEX NUT
1215-S	MOTOR MOUNT STUD SET (3)	7648	5/16-18 x 3/4 CAP SCREW
1216	DRIVE HEAD RETAINING RING	7650	1/4-20 x 3/8 HEX HEAD
1225	FISH PAPER	7659	10-24 x 3/4 FILL HEAD W/SPACER TUBE
19939	MOTOR	7672	1/4-20 x 3/4 OVAL HEAD SCREW
1278	KETTLE LEVEL ADJ. SCREW	7772	6-32 x1/4 BINDING HEAD
1279	KETTLE ADJUSTING SPACER	7779	1/4" SAE FLAT WASHER
1308	ANTI-PAK PIN	7781	1/2 " FLAT WASHER
1319	PAN CENTER WASHER	7788	#6 LOCKWASHER
1502	INDICATOR LIGHT - GREEN	7789	# 8 STAR WASHER
1600-1	TUBING-SILICONE PER FOOT	7800	1/4" NPT HEX THIN NUT
1901	SPRING COLLAR	7839	1/4 -28 x 5/8 HEX HEAD
1902	DUMP SPRING - 13 COIL	7898	10-24 x 1/2 SS WELD SCREW
1903	DUMP SPRING - 10 COIL	7839	1/4-28 x 5/8 HEX HEAD
1923-2	DISCHARGE TUBE BOTTOM- 32 OZ	10261	FISHPAPER WASHER DIRECT WIRE
1923-2-L	DISCHARGE TUBE BOTTOM-LONG	10352	INDICATOR LIGHT W/TABS
2122	BUSHING HEYCO	10536	6-32 x 3/8 SHEET METAL SCREWS
2130	PIPE CLAMP	12025	KETTLE APRON - 1 PC
3913-1	3/8 SS FLEXIBLE CONDUIT	12026-SQ4	STIRRER BLADE ASSY
14446-S	DECAL - CORN	1204	HINGE PIN - 1 PC
4053	MOTOR DRIVE HEAD W/SHIELD	12052	ELBOW - DIRECT OIL
4261	CIRCUIT BREAKER - 120V/15A	12052-2	"O" RING
4675	1/4" SS ELBOW	12053	COUPLING DIRECT OIL
4780	DECAL - INSTRUCTIONS - 20/32/48	12054	1/4" NPT TO 3/8" TUBE RIGHT ANGLE
4781	DECAL - SWITCH	12055	TUBE COVER- 3/8" x 24" SS FLUID CONDUIT
16673	SWITCHPLATE - ROCKER - DIGITAL	12119	OIL TUBE BRACKET
4907	TERMINAL BLOCK 40 AMP	19482	TIMER- 120V/230V DUAL - OFF DELAY
5130	SWITCH - LIGHTED	12268	KETTLE COVER - FRONT
5200	INDICATOR LIGHT	12269	KETTLE COVER - REAR
16701	CIRCUIT BREAKER - 50 AMP	12270	KETTLE COVER PIN
5532	CROSS SHAFT	12409	KETTLE COVER ASSY 1 PC/2 PIN
5533	CROSS SHAFT LUG	12868	TOGGLE SWITCH-3PDT-ON/OFF
5534	SPRING COVER	16673	SWITCHPLATE - ONE POP - DIGITAL
5663	TERMINAL BLOCK	12886	DECAL - ONE POP (SS = SALT SUGAR)
5828	5/16-24 x 1/2 HALF DOG PT. SET SC	12975	1/4-28 X 3/16 SET SCREW
5977	WIRE TERMINAL STUD	12976	DRIVE PIN-MOTOR DRIVE HEAD
5979	TERMINAL HOUSING - DIRECT WIRE	14468	SWITCH-DOUBLE POLE-PUSH BUTTON
5978	TERMINAL COVER PLATE	14583	RELAY-120V.-SINGLE POLE
5980	MYKROY PLATE	14585-E	DIGITAL CONTROLLER - 120V
5981	BAKELITE WASHER	14585-CG	DIGITAL CONTROLLER GUARD
5983-DIGITAL	WIRE ASSY-DW (C,D,E)		
5992	INSULATOR TUBE		
7253	RETAINER - G32/48/60E		
7451	DUMP HANDLE - G32/48/60E		

C. CRETORS AND COMPANY
3243 N. CALIFORNIA AVENUE
CHICAGO, IL 60618
PHONE: (773)588-1690, (800)228-1885, FAX: (773)588-2171
WEB SITE: <http://www.cretors.com> Email: postmaster@cretors.com

